

VDC-3500

Quick Guide



Technical Support.....(949) 788-3600
Technical Support Fax.....(949) 788-3670
Internet.....<http://www.mustek.com>

Using the VDC-3500

1 Battery Installation


The VDC-3500 uses a 3V lithium battery (CR123A) included with the camera. Insert the battery as shown below.



2 Memory Card



The VDC-3500 uses a special memory card to store your pictures. Install the memory card as shown below.

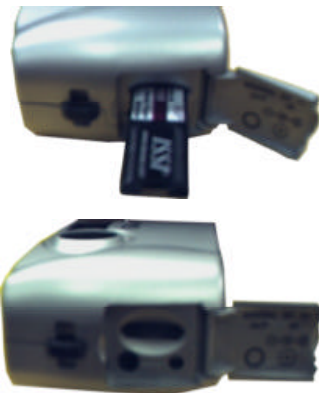

3 Capturing Images

1. Press the Power ON/OFF button to turn on the camera. The power indicator will be lit to indicate that the camera is powered on.
2. The Flash indicator will also be lit to indicate that the camera is in ready status.
3. Focus the preferred object or image with the viewfinder.
4. Press the Shutter Release button to take the picture of the object or image in the viewfinder. A "click" will indicate the picture has been taken.
5. The power indicator will flash steadily until the image has completely processed.
6. The Memory Full indicator will flash when the camera's memory has enough memory for about 3 images at high resolution.
7. The camera will automatically shut off when it is in standby-by status for over 90 seconds.

Software Installation

1 Windows 95 or higher

1. Insert the installation CD into your CD-ROM drive.




2. Follow all on-screen instructions.
Note: If on-screen instructions do not appear, please go to step 3.

3. Click on the Windows **Start** button and select **Run**.



4. In the **Run** dialog box, type x:\SETUP.EXE" where "x" is the letter of your CD-ROM drive (e.g. D:\SETUP.EXE) and click **OK**.

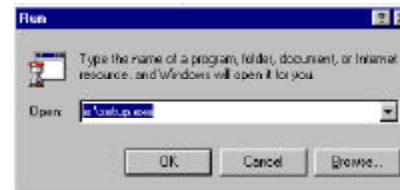


5. Follow all on-screen instructions.

Connecting the VDC-3500 to your PC

1. Plug one end of the cable into the RS232 9-pin port on the back of your computer.

Note: Some systems may require a 9-pin to 25-pin adapter (not included).

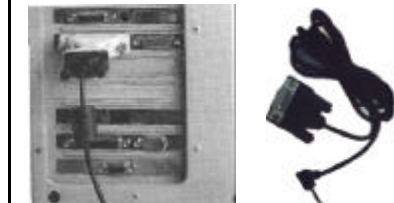

2. Plug the other end of the cable into the VDC-3500's digital out port.



Transferring Images to your PC

1. Click on the Windows Start button and select Programs.
2. Locate and select iXla Digital Camera Suite, and click on it.
3. The iXla Activity Guide will appear. Click on Get your Photos, located in the upper left hand corner of the guide.



4. Click the Next button.
5. Make sure Digital Camera is selected, then click Next.



6. Scroll down the list of cameras and highlight Other. Click Next.

7. Highlight the VDC-3500, then click Next.




8. Select a folder where you would like your image file saved (e.g. C:\MyDocuments). Type in a filename for your image (e.g. Test01), and select an image file format.

9. The digital camera Take Mode will come up initially. Click the switch to Download Mode button (circled below).



10. Click the image you want to transfer and click the Download Image from Camera button (circled below) to transfer the selected image to your computer.

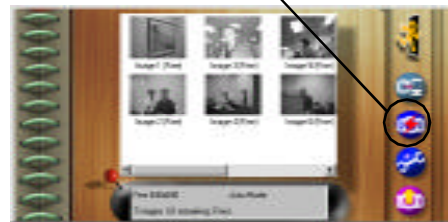

11. The screen will display a progress indicator of your image transfer.



12. A screen will confirm the successful transfer of your image(s). Click Next.



13. Type in a name for your catalog (The default is an abbreviated date). Click Next.




14. Verify that the Display photos in Browser option is selected, then click Finish.



15. At the bottom of the screen is the Browser with thumbnails of your image(s) on the Photo tab. Go to the File menu in the upper left and select New, and click Blank Album.



16. A blank sheet will appear. By double-clicking on the thumbnails in the Browser at the bottom of the screen, you will display the selected image in the center window.

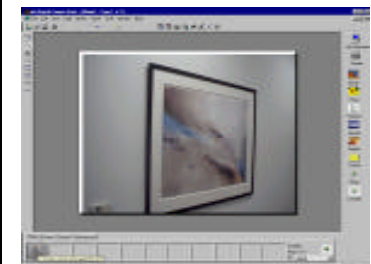

17. For more detailed instructions, reference help at any time by hitting the F1 key on your keyboard.

Using the iXla Explorer

If you have a group of images and want to work with them easily, you can use the iXla Explorer. It allows you to view a group of images in a single folder as thumbnails. This program will allow you to manipulate the files like the Windows Explorer.